

South Amboy Kitchen Orientation Checklist

Overall tour of physical space Office Coworking Office Bathroom Cooking Kitchen 1 Cooking Kitchen 2 Baking Kitchen 1 Prep Kitchen 1 Prep Kitchen 2 Walk In Refrigeration Walk in Freezer Utility Area Janitorial Area

Fire Safety in case of fire

- Pull the Pull station lever on the wall
- Pick up K class fire extinguisher & stand by in case of reflash
- In case of reflash pull pin on the extinguisher and spray on base of the fire.
- Safety first, Leave the area and move out doors immediately if not extinguished right away with fire suppression.

First Aid station location

	How	to	use	equipme	nt
•					

<u>Ovens</u>

Operation:

- Open to make sure nothing is in it
- Turn Master switch to ON
- Set thermostat as desired, preheat temp reached when HEAT light goes off
- Set the timer
- *refer to manual for cooking guidelines

How to clean:

- Turn the thermostat to lowest setting
- Turn MasterSwitch to OVEN COOL and leave doors open



- Use Neutral Disinfectant to clean entire interior
- Clean the oven racks with Neutral Disinfectant or at 3 comp sink
- Use a clean, damp cloth to clean the exterior of the oven

Ranges
Operation:
Burners

Simply turn on to desired setting

Oven

- Turn knob to desired temperature
- Preheat for 20-25 minutes
- Load and Unload quickly to conserve heat and ensure proper heating conditions for the next load

How to clean:

- POWER OFF BURNERS AND ALLOW TO COOL BEFORE CLEANING
- Spray grates with Sysco Peroxide spray and thoroughly wipe down with a towel
- Immediately after drying lightly spray with cooking oil spray to season
- Turn on all burners to low and leave on for 10-15
- GRATES MUST BE SEASONED AFTER EACH CLEANING TO AVOID RUST
- Use spray bottle and towels to clean sides, top, and oven be be be spray bottle.

Stove	
Operation:	_

Burners

Simply turn on to desired setting

How to clean:

- POWER OFF BURNERS AND ALLOW TO COOL BEFORE CLEANING
- Spray grates with Sysco Peroxide spray and thoroughly wipe down with a towel
- Immediately after drying lightly spray with cooking oil spray to season
- Turn on all burners to low and leave on for 10-15
- GRATES MUST BE SEASONED AFTER EACH CLEANING TO AVOID RUST
- Use spray bottle and towels to clean sides, top, and oven



Mixer Operation:

- Set desired speed based on attachment using
- DO NOT CHANGE SPEED WHILE MACHINE IS RUNNING
- Place attachment on machine and lift bowl all the way up
- For mixer with timer set timer to desired time or set timer to hold to run continuously
- Press Start Button to start and Stop to Stop Fee

How to clean:

- Turn off and unplug prior to cleaning
- · Clean entire mixer with a damp cloth
- Wash, rinse, and sanitize bowl and any attachments used
- DO NOT RUN ATTACHMENTS THROUGH DISHWASHER

<u>Ro</u>	<u>bot</u>	Cou	pe_	
Op	erat	ion:		

Bowl Attachment

- Place bowl onto base with handle facing towards the front turning it slightly off center and to the left as lowered
- Then, turn it back to the right, (counterclockwise) locking it onto the motor base tabs.
- Place blade onto shaft and rotate until it drops into place
- Place lid on bowl with tab slightly to the left and slide back to the right once lowered until the tab stops inline with the bowl handle

Operation:

Vegetable Attachment

Please use Robot Coupe CL50 for vegetable prep



How to clean: Robot coupe continued

- · Remove cap attached to the blade
- · Wash, rinse, and sanitize being careful with the blade
- Bowl, blade, and lids are all dishwasher safe
- Rinse and scrub with a stiff bristle brush before washing to remove bulk

 food particles

 [1]

Charbroiler

Operation:

- To light the burners turn knob to the MAX setting then adjust to the desired setting as needed
- Allow to preheat for 30 minutes
- · Rub grates with cooking oil before use
- Scrape grates during broiling with wire brush to keep clean

How to clean:

- Scrape with wire brush throughout use
- Do not allow debris to accumulate on grates
- Wipe grates with degreaser and towel, dry, and apply oil to grates
- Remove grates to clean accumulated grease and food
- Remove deflector and crumb trays to empty and clean and replace aluminum if
 needed [2]

Tilt Skillet/Griddle

Operation:

- To light the burners turn knob then adjust to the desired setting as needed
- Allow to preheat
- · Rub cooking surface with cooking oil before use
- Scrape cooking surface during cooking with scraper to keep clean



How to clean:

- · Scrape with scraper throughout use
- · Do not allow debris to accumulate
- · Wipe cooking surface with degreaser and towel, dry, and apply oil to grates
- Remove deflector and crumb trays to empty and clean and replace aluminum if
 needed [1]

<u>Fryer</u>
Reach In Refrigerator
Reach In Freezer
<u>Sinks</u>
<u>Hood</u>
<u>Etc</u>
Cleaning Procedures : general not discussed above discussed & understood. Storage
Personal hygiene
- Head covering
- Hand washing Door locks,
Security system,
Cameras,
Music (No Music Allowed)Alcohol or Intoxicant Consumption (Not Allowed)
Smoking (Not Allowed)
Emergency contact info Trash, recycling, and compost Parking and
neighborhood info [FP] Co-working space and wi-fi
The Kitchen User agrees that all items above have been reviewed and all questions

WWW.SOUTHAMBOYKITCHEN.COM 236 N STEVENS AVE SOUTH AMBOY NJ 008879



8482286707 INFO@SOUTHAMBOYKITCHEN.COM

have been addressed.
[1] SEP
Sign name
[1] SEP
Print name
[1] [SEP]
Company name
Date [L]

Notes: